
# EK-Quantum Vector<sup>2</sup> EVO Strix-TUF RTX 4090



**GPU WATER BLOCK** 

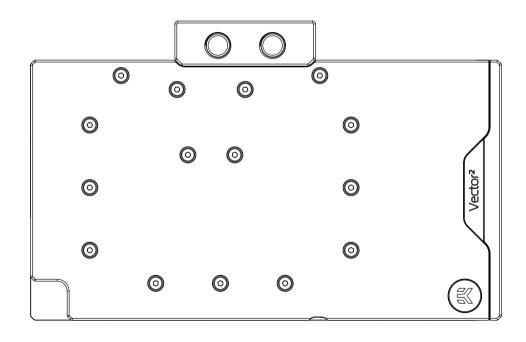

Please note the installation of the product is intended to be undertaken by an adequately trained and experienced person. You are installing the product at your own risk. If you are not properly trained or experienced or feel unsure about the installation procedure, please refrain from installing the product yourself and contact our tech support for assistance. We disclaim our liability for any damages to the product as well as incidental, consequential, or indirect damages incurred due to improper or inappropriate installation.

Before you start using this product, please follow these basic guidelines:

Carefully read the manual before beginning with the installation process.

Remove your graphics card from the computer for the safest mounting process to prevent any possible damage to your GPU or its circuit board (PCB).

The EK Fittings require only a small amount of force to screw them firmly in place since the liquid seal is ensured by the rubber O-ring gaskets.

The use of corrosion-inhibiting coolants is always recommended for liquid cooling systems and mandatory for nickel-plated water blocks!


Do not use pure distilled water!

For best results, EK recommends the use of EK-CryoFuel coolants! To reach optimal performance, make sure to thoroughly bleed the air out of your water block!

# **TABLE OF CONTENTS**


BOX CONTENTS	4
WATER BLOCK DIMENSIONS	5
TECHNICAL SPECIFICATIONS AND WATER BLOCK PARTS	6
NICKEL PLEXI	6
PREPARING THE GRAPHICS CARD	
REMOVING THE STOCK COOLER	
ASUS TUF-STRIX GEFORCE RTX 4090	7
PREPARING THE WATER BLOCK FOR INSTALLATION	9
CUTTING AND PLACING THERMAL PADS - WATER BLOCK	10
APPLYING THERMAL COMPOUND	
ATTACHING THE WATER BLOCK (Option 1: GeForce RTX 4090 ROG Strix)	13
ATTACHING THE WATER BLOCK (Option 2: GeForce RTX 4090 TUF)	14
CUTTING AND PLACING THERMAL PADS - BACKPLATE	16
ATTACHING THE BACKPLATE	18
INSERTING THE GRAPHICS CARD INTO THE CHASSIS	18
FITTINGS AND TUBING	19
CONNECTING THE D-RGB LED STRIP	19
TESTING THE LOOP	20
WARRANTY	20
SUPPORT AND SERVICE	21
SOCIAL MEDIA	21

# **BOX CONTENTS**

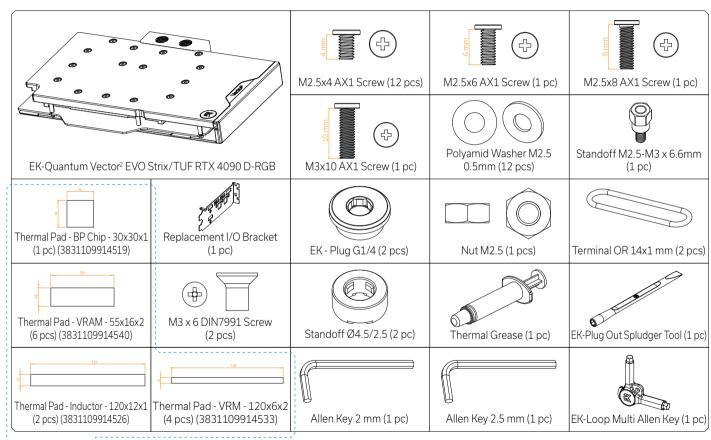


EAN: 107479

# WATER BLOCK DIMENSIONS

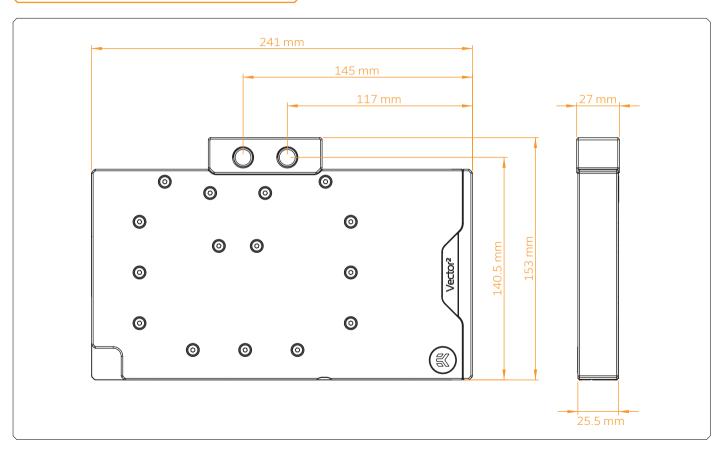

# **TECHNICAL SPECIFICATIONS AND WATER BLOCK PARTS**

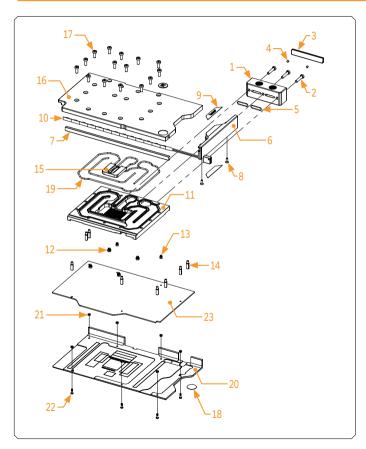



### **NICKEL PLEXI**

- Dimensions: (L x H x W): 241 x 153 x 27 mm
- D-RGB LED count: 12
- D-RGB cable length: 50 cm
- D-RGB connector 3-pin 5V digital LED header

Position	EAN	Description	Quantity
1	105988	FC Terminal (Acetal)	1
2	8311	Screw M4 x 20 DIN7984	3
3	103942	Terminal Badge	1
4	104216	Disc magnet 3 x 3	2
5	104106	Terminal OR - 14 x 1 mm	2
6	106982	Stand out (Acetal)	1
7	106957	LED Cover (Nat. Elox)	1
8	8208	Screw M3 x 8 7991DIN	2
9	103964	Mylar sticker	2
10	101556	LED D-RGB strip	1
11	106967	Coldplate (Ni)	1
12	103988	Standoff M4-M2.5 x 3 mm	4
13	103987	Standoff M3.5-M2.5 x 3 mm	2
14	103986	Standoff M3.5-M2.5 x 11.3 mm	8
15	106133	Plexi insert	1
16	106975	Top Plate (Plexi)	1
17	9024	Screw M4 x 10 DIN7984	15
18	100663	EK Badge	2
19	106972	OR - Vector <sup>2</sup> EVO Strix TUF RTX	1
20	106960	Backplate (Bl. Elox)	1
21	104188	Standoff fi 4.5/2.5 mm	7
22	104187	Screw M2.5 x 8 AX1n	7
23	107524	PCB Cardboard	1

# PREPARING THE GRAPHICS CARD

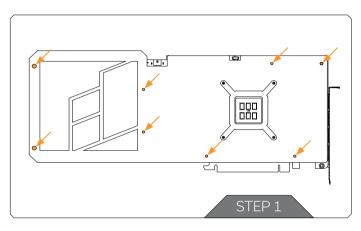

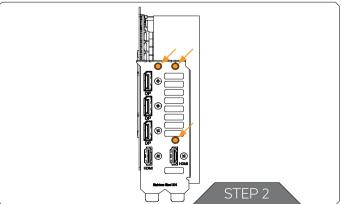

### **REMOVING THE STOCK COOLER**

### **ASUS TUF-STRIX GEFORCE RTX 4090**




**Important!** Before starting, make sure to have a clean, flat surface to work on. It is recommended to put foam or soft material to lay the graphics card on.

### STEP 1


First, remove eight (8) screws from the backside of the Stock cooler (using Phillips head screwdriver).

### STEP 2

Unscrew three (3) screws from the I/O Bracket (using Phillips head screwdriver). Unplug the connectors in order to remove the stock cover from the GPU PCB.

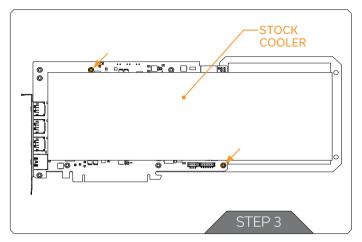


From the front side of the GPU, an additional two (2) screws must be removed (using Phillips head screwdriver). Detach the GPU Backplate.

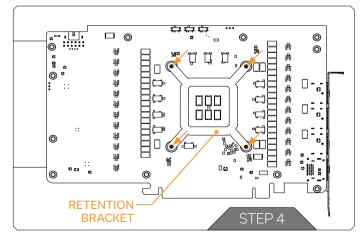

### STEP 4


Rotate the GPU and unscrew four (4) Screws from the retention bracket (using Phillips head screwdriver). Remove the bracket and Stock Cooler from the GPU PCB.

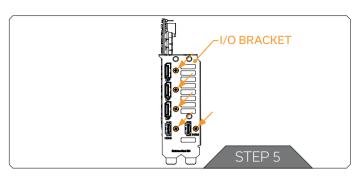

Lastly, unscrew five (5) Screws and detach the I/O Bracket (using Phillips head screwdriver).

EK provides the replacement I/O Bracket with the water block.

# PREPARING THE WATER BLOCK FOR INSTALLATION

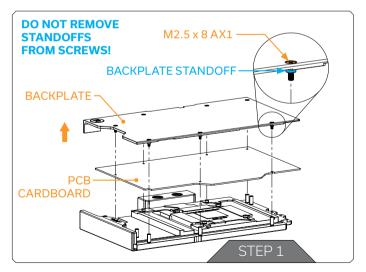


### STEP 1


Unscrew seven (7) Screws AX1 M2.5 x 8 mm. Remove the backplate together with the Screws and backplate standoffs. Standoffs must stay on Screws AX1 M2.5 x 8 mm. Remove the PCB cardboard. Save the removed parts for later steps.



Do not remove standoffs from screws! In case the standoff detaches from the screw, replace it with a spare one. When replacing the standoff make sure that you screw it on the AX1 M2.5 x 8 screws. Do not push the standoff onto the screw AX1 M2.5 x 8 mm.

For this step, you will need:

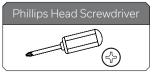


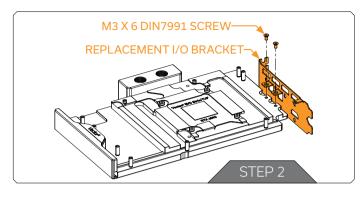

Position the replacement I/O Bracket on the water block. During this process, make sure you have aligned the holes. Secure it with the two (2) M3 x 6 DIN7991 Screws and Allen Key 2 mm.


For this step, you will need:



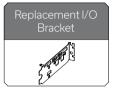



# CUTTING AND PLACING THERMAL PADS - WATER BLOCK

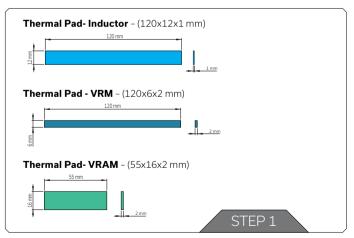

### STEP 1


The GPU water block comes with pre-cut thermal pads, but some of them need to be additionally cut into smaller pieces.



Remove the protective foil from both sides of the thermal pad before installation.

Replacement thermal pads:


Thermal Pad- VRM - (120x6x2 mm) EAN: 3831109914533 - 2 pcs Thermal Pad- Inductor - (120x12x1 mm) EAN: 3831109914526 - 2 pcs Thermal Pad- VRAM - (55x16x2 mm) EAN: 3831109914540 - 3 pcs

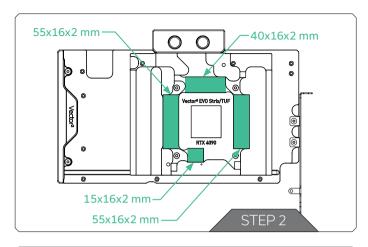

Use three (3) Thermal Pads- VRAM – (55x16x2 mm). From one (1) of them cut away a peace of length 15 mm.

Thermal Pad- VRAM - (55x16x2 mm)



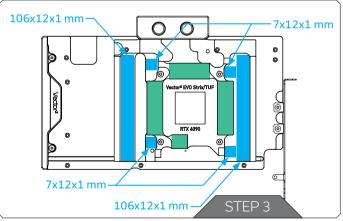


### STEP 3

Use two (2) Thermal Pads-Inductor – (120x12x1 mm) From each of them cut two (2) pieces of length 7 mm.

Thermal Pad- Inductor - (120x12x1 mm)



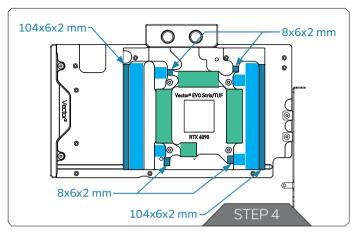


Use two (2) Thermal Pad- VRM – (120x6x2 mm) From each of them cut two (2) pieces of length 8 mm

Thermal Pad - VRM - (120x6x2 mm)



# **APPLYING THERMAL COMPOUND**

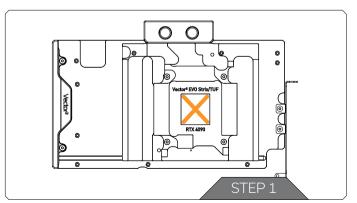


### STEP 1

Apply the enclosed thermal grease (thermal compound) on the GPU heat spreader – IHS – as shown in the image. The layer of the thermal compound must be thin and even over the entire surface of the IHS.




The excessive or uneven application of thermal grease may lead to poor performance!

For this step, you will need:

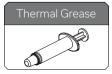

# ATTACHING THE WATER BLOCK (Option 1: GeForce RTX 4090 ROG Strix)

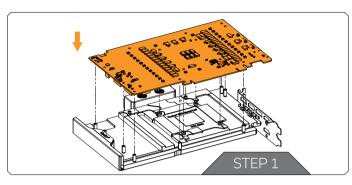

# M2.5 × 4 AX1 SCREW M2.5 PVC WASHER FACTORY PROVIDED I/O BRACKET SCREWS STEP 2

### STEP 1

Carefully position the PCB on the water block. During this process, make sure you have aligned the mounting holes of the PCB with the holes of the water block.



Pay attention not to use too much force when pressing the PCB down to the block since chip dies are prone to cracking.




Before attaching the PCB to the Water Block, make sure all the Thermal Pads are placed correctly!

### STEP 2

Use seven (7) M2.5 x 4 AX1 Screws and PVC washers to tighten the PCB on the water block. Tighten the screws evenly using the Phillips-head screwdriver. EK recommends you start tightening the screws around the GPU core first, and then continuing outward to prevent damage to the GPU. After attaching the water block, three (3) saved Factory provided I/O Bracket screws can be reused.


For this step, you will need:

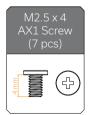








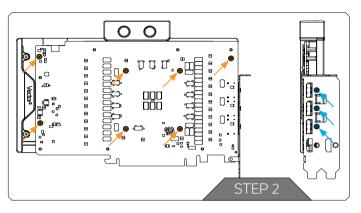

Screws must be present in the places marked on the picture.

# ATTACHING THE WATER BLOCK (Option 2: GeForce RTX 4090 TUF)

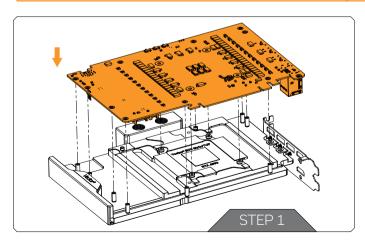

### STEP 1


Carefully position the PCB on the water block. During this process, make sure you have aligned the mounting holes of the PCB with the holes of the water block.




Pay attention not to use too much force when pressing the block down to the PCB since chip dies are prone to cracking.




Before attaching the PCB to the Water Block, make sure all the Thermal Pads are placed correctly!

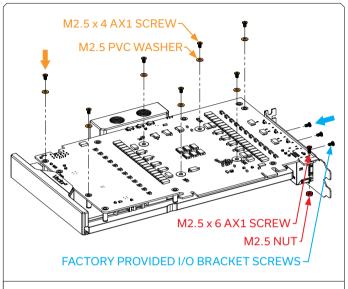

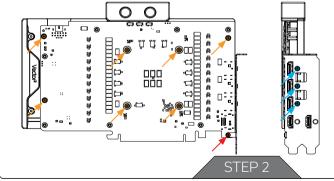


Use seven (7) M2.5 x 4 AX1 Screws and PVC washers to tighten the PCB on the water block. Tighten the screws evenly using the Phillipshead screwdriver. EK recommends you start tightening the screws around the GPU core first, and then continuing outward to prevent damage to the GPU. After attaching the water block, three (3) saved Factory provided I/O Bracket screws can be reused.


For this step, you will need:

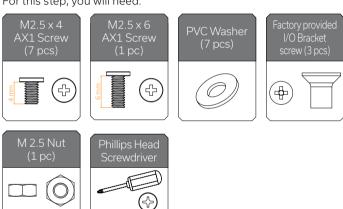

Screws must be present in the places marked on the picture.

# **CUTTING AND PLACING THERMAL PADS - BACKPLATE**

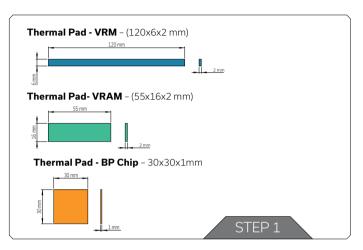

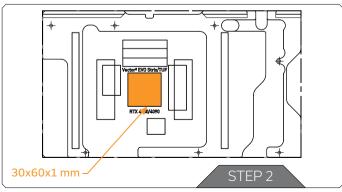

### STEP 1

After attaching the water block, a few more thermal pads need to be placed on backplate to cover all the necessary components.



Pay attention not to use too much force when pressing the block down to the PCB since chip dies are prone to cracking.



Before attaching the PCB to the Water Block, make sure all the Thermal Pads are placed correctly!

Replacement thermal pads:


Thermal Pad - BP Chip - 30x30x1mm EAN: 3831109914519 - 1 pc Thermal Pad- VRAM - (55x16x2 mm) EAN: 3831109914540 - 3 pcs Thermal Pad- VRM - (120x6x2 mm) EAN: 3831109914533 - 2 pcs

### STEP 2

Place Thermal Pad - BP Chip - 30x30x1mm on the marked position.


Thermal Pad - BP Chip - 30x30x1mm



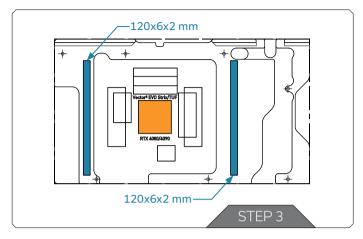

Place Thermal Pad- VRM - (120x6x2 mm) on the marked position.



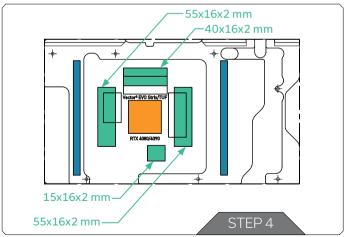


### STEP 4

Use three (3) Thermal Pads- VRAM – (55x16x2 mm). From one (1) of them cut away a peace of length 15 mm.

Thermal Pad- VRAM – (55x16x2 mm)

# ATTACHING THE BACKPLATE

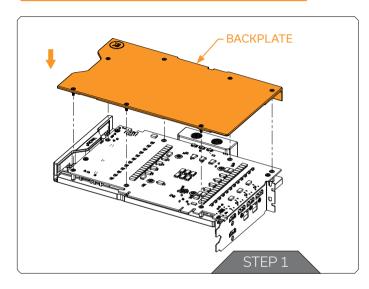


### STEP 1

Position the Backplate (including screws and standoffs) onto the GPU PCB. Make sure all the holes are aligned. Tighten the screws evenly.

Before attaching the backplate, make sure all the Thermal Pads are placed correctly!

Do not use excessive force!

For this step, you will need:

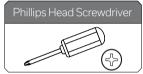


# **INSERTING THE GRAPHICS CARD INTO THE CHASSIS**

Carefully lift your graphics card with the installed water block and insert it into your PC's motherboard PCI Express expansion slot. Please keep in mind that your graphics card is heavier than before it was equipped with the water block.



You need to be very careful when handling the graphics card. Avoid all unnecessary manipulation of the water block assembly that might damage your card or water block.

# FITTINGS AND TUBING

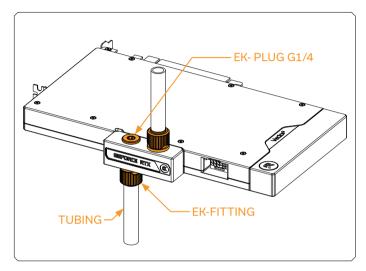

Screw in two (2) G1/4 threaded male fittings. Attach the liquid cooling tubes and connect the water block to the cooling loop.



Do not forget to plug the remaining two openings using the enclosed EK-Plug G1/4 or its equivalent.

### EK recommends using EK fittings with all EK water blocks.




CAUTION: When using connectors other than EK fittings, pay special attention to the length of the fittings' male G1/4" thread – 5mm is the maximum G1/4" thread length allowed!

### For this step, you will need:



# **CONNECTING THE D-RGB LED STRIP**

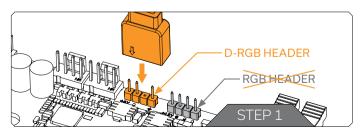

### STEP 1

Plug the **3-pin connector** of the distribution plate D-RGB LED light to the **D-RGB HEADER** on the motherboard. The LED will work if the pin layout on the header is as follows: **+5V, Digital, Empty, Ground**.



Incorrect installation or installation to a wrong header can damage the LED strip or the header itself!

# **TESTING THE LOOP**

To make sure the installation of EK components was successful, we recommend you perform a leak test for 24 hours. When your loop is complete and filled with coolant, connect the pump to a PSU outside of your system. Do not connect power to any of the other components. Turn on the PSU and let the pump run continuously. It is normal for the coolant level to drop during this process as air collects in the distribution plate. Inspect all parts of the loop, and in the eventuality, that the coolant leaks, fix the issue and repeat the testing process. Ensure that all hardware is dry before the system is powered on in order to prevent any damage.

# WARRANTY

Our products are warranted against defects of materials and quality for a period of 24 months, starting with the date of delivery to the end-user. During this period, products will be repaired or have parts replaced at our discretion, provided that 1) the product is returned to the agent from whom it was purchased; 2) the product has been purchased by the end-user and has not been used for commercial purposes; 3) the product has not been misused, handled carelessly, or used in a manner other than the way described in the instruction's manual. This warranty does not confer rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an extra benefit and does not affect your statutory rights as a consumer. This warranty is voided if the product comes in contact with aggressive UV additives or other improper liquids. EK Water blocks are sealed with a warranty-voiding circular label, proving the water block has withstood a pressure leak test. Removing the label will void the leak-free guarantee, but not the guarantee on the product itself. Any other RMA issues can be reported to EK Customer Support at www.ekwb.com/support for further analysis.

# **SUPPORT AND SERVICE**

In case you need assistance or wish to order spare parts or a new mounting mechanism, please contact:

https://www.ekwb.com/customer-support/

For spare parts orders, refer to the page with "TECHNICAL SPECIFICATIONS AND WATER BLOCK PARTS" where you can find the EAN number of each part you might need.

Include the EAN number with quantity in your request. Mounting Mechanism EAN can be found under "BOX CONTENTS"

Thermal pads are readily available in the EK shop

# **SOCIAL MEDIA**

- **f** EKWaterBlocks
- ekwaterblocks
- EKWBofficial
- ekwaterblocks

