


EK-Pro GPU WB RTX A5000 Nickel + Inox

GPU WATER BLOCK

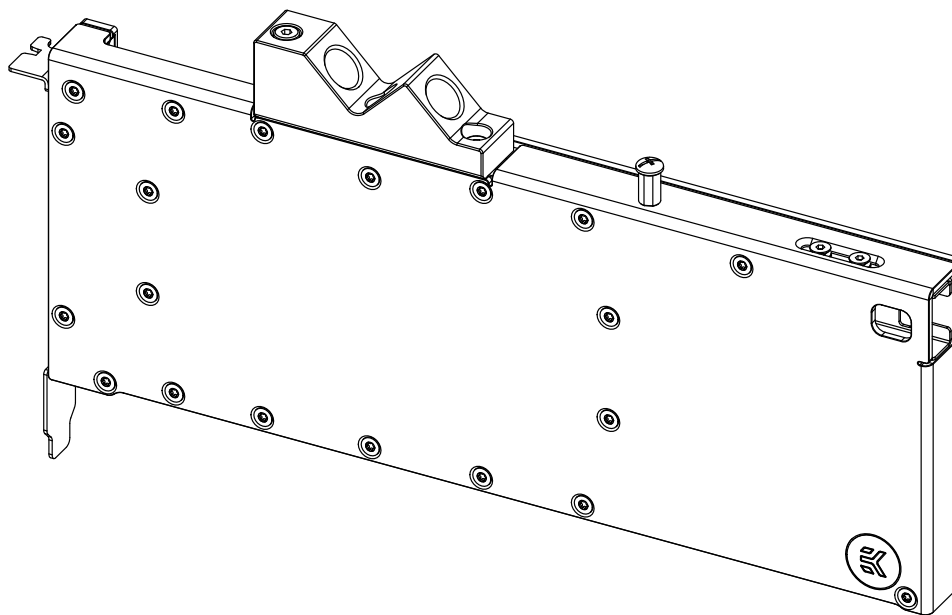

If this product is made from aluminum and can be only used with other aluminum liquid cooling components, such as Al fittings, water blocks and radiators. Mixing aluminum with copper and brass products can cause galvanic corrosion of the metal and render liquid cooling equipment useless. Such misuse is not covered by warranty.

Before you start using this product, please follow these basic guidelines:

Please carefully read the manual before beginning with the installation process!

Please remove your graphics card from the computer to assure safest mounting process in order to prevent any possible damages to your GPU and/or graphics card circuit board (PCB).

The EK Fittings require only a small amount of force to screw them firmly in place since the liquid seal is ensured by the rubber O-ring gaskets.

The use of corrosion inhibiting coolants is always recommended for liquid cooling systems, and mandatory for nickel plated water blocks!

Do not use pure distilled water! For best results EK recommends the use of EK-CryoFuel coolants!

Make sure to thoroughly bleed air out of your water block, or you will not reach optimal performance!


TABLE OF CONTENTS

BOX CONTENTS	4
WATER BLOCK DIMENSIONS	5
WATER BLOCK SPECIFICATIONS AND MAIN PARTS	6
PREPARING THE GRAPHICS CARD	7
CLEANING THE PCB	7
CUTTING AND PLACING THERMAL PADS	7
APPLYING THERMAL COMPOUND	8
UNPACKING AND REASSEMBLYING	9
INSTALLING THE WATER BLOCK	10
MOUNTING PCB ON THE WATER BLOCK	10
ATTACHING THE BACKPLATE TO THE GRAPHICS CARD	11
MOUNTING BACKPLATE ON PCB	11
CHECKING FOR CONTACT	12
INSERTING THE GRAPHICS CARD INTO THE CHASSIS	12
TESTING THE LOOP	13
SUPPORT AND SERVICE	14
SOCIAL MEDIA	14


BOX CONTENTS

068-Mounting RTX A5000 (1x) 107242


Note: There are additional screws in the mounting kit.

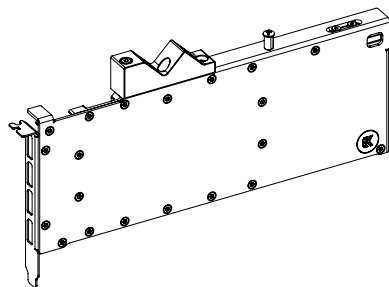


EK-Pro GPU WB RTX A5000 Nickel + Inox

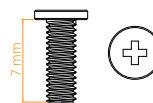

M2.5x7 AX1 Screw (5x)

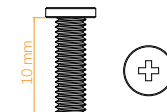

M2.5x10 AX1 Screw (5x)

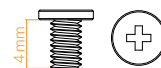

M2.5x4 AX1 Screw (5x)




Polyamid Washer M2.5 x 0.7mm selfglued (4x)



Allen Key 2 mm (1x)




Polyamid Washer M2.5 x 0.5 mm (5x)

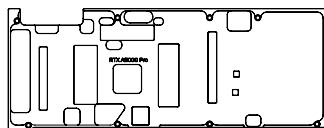


068-ali-RTX A5000 Backplate (Bl. elox)

Karton - Screw size guide

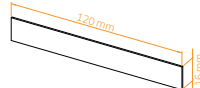

Thermal Pad F 1.5 mm (120 x 16 mm) (10x) (3830046996749)

WATER BLOCK DIMENSIONS

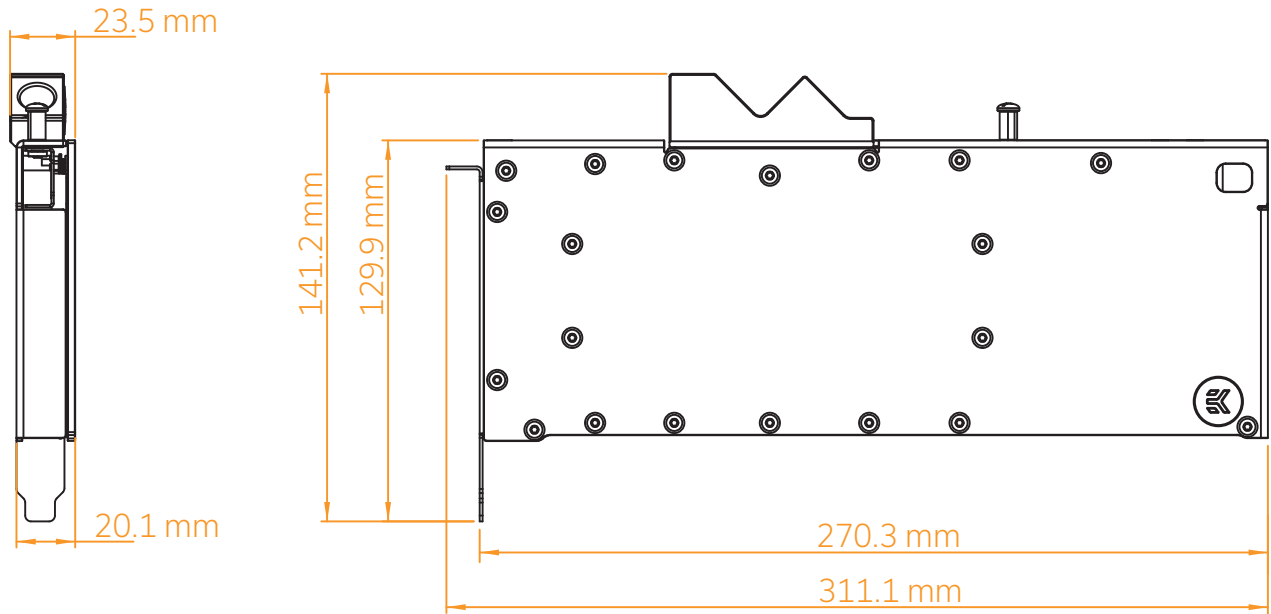


WATER BLOCK SPECIFICATIONS AND MAIN PARTS

Technical Specification:

- Dimensions (LxHxW): 311.1 x 141.2 x 23.5 mm


Pos.	EAN	Description	Qty.
1	104958	RTX A5000 Coldplate (Ni)	1
2	105039	RTX A5000 Backplate	1
3	104959	RTX A5000 Top	1
4	103987	Standoff M3.5-M2.5 x 3	8
5	103698	RTX A5000 Bracket (Bl. Nickel)	1
6	8483	Screw UNC6-32 x 5	1
7	102490	Pro GPU Bracket standoff M4	1
8	8489	Screw M3 x 6 DIN7991	2
9	102549	Pro GPU Jet	1
10	104318	GPU insert	1
11	102932	Standoff M3-M2.5 x 12.7	4
12	3674	FC Terminal M4 Pre-filled	1
13	5155	O-ring 15 x1	2
14	9024	Screw M4 x 10 DIN7984	2
15	100006	Screw M4 x 27 DIN7984	1
16	8627	Washer POLYAMID M2.5 0.7 mm selfglued	5
17	105485	O-ring 122 x 2	1
18	9049	Screw M2.5x7	4
19	105106	Power adapter	1
20	103090	Screw ISO 14581 M3 x 6	20
21	104344	Screw M2.5 x 10	4
22	8623	Washer Poliamid M2.5 x 0.5	4
23	9047	Screw M2.5 x 4	4

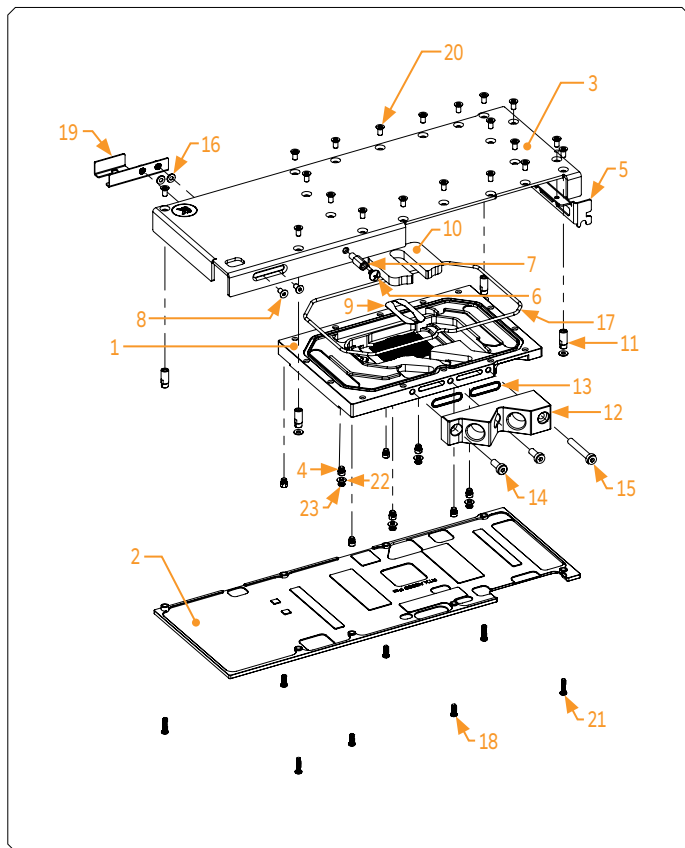

PREPARING THE GRAPHICS CARD


Place your graphics card on the flat surface and carefully remove the stock cooler. Do not forget to unplug all fan connectors. Pay attention to the following steps when installing the **EK-RTX A5000** water block onto your graphics card.

CLEANING THE PCB

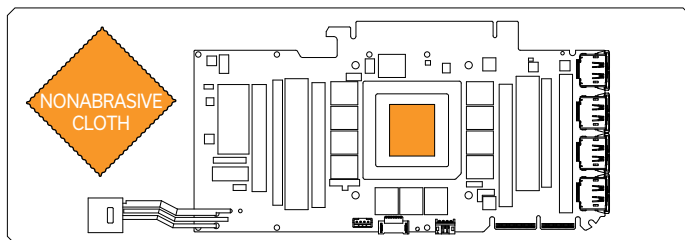

Wipe off the remains of the original thermal compound using a nonabrasive cloth or Q-tip, as shown in the sample image, until the components and circuit board are completely clean. EK recommends the use of denatured alcohol for removing TIM leftovers. After that, remove all remaining stock thermal pads from the PCB.

CUTTING AND PLACING THERMAL PADS

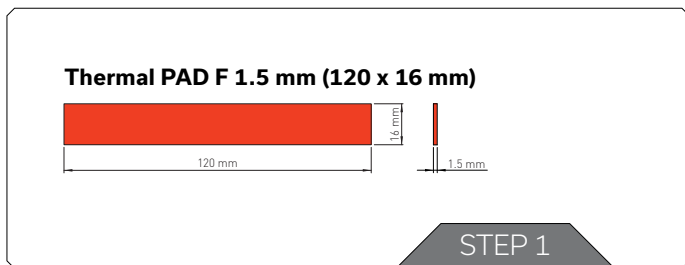


STEP 1

Your GPU water block comes with thermal pads that have to be cut into smaller pieces to cover all the VRM components, such as COILs, MOSFETs, and drivers.



You must remove the protective foil from both sides of the thermal pad before installation.


Thermal pads:
10x Thermal Pad F 1.5 mm - (120 x 16 mm) EAN: 3830046996749

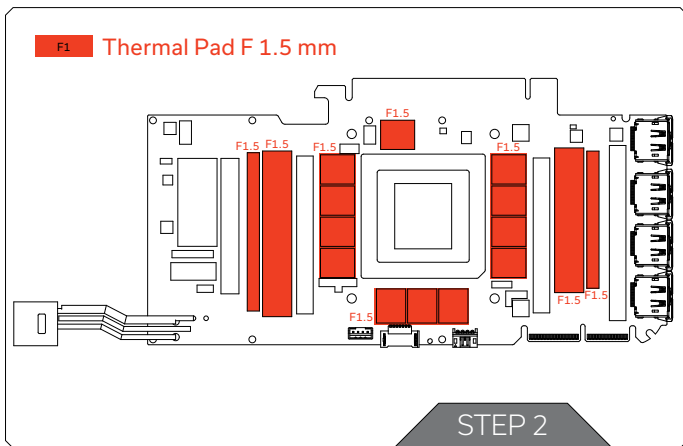


STEP 2

Once cut to size, thermal pads should be placed on the PCB, as illustrated below. EK made sure to provide you with more than an adequate quantity of thermal pads to complete this Step.

For this Step, you will need:

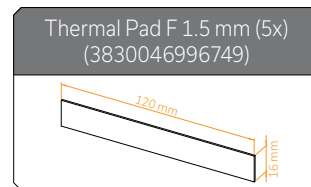

APPLYING THERMAL COMPOUND

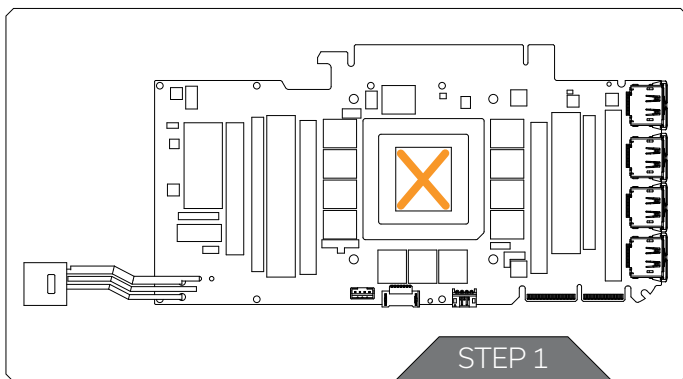


STEP 1


Apply the enclosed EK-TIM Ectotherm thermal grease (thermal compound) on the GPU heat spreader – IHS – as shown in the image. The layer of the thermal compound must be thin and even over the entire surface of the IHS.

The excessive or uneven application of thermal grease may lead to poor performance!

For this Step, you will need:

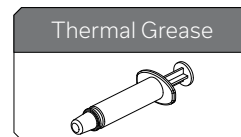


UNPACKING AND REASSEMBLYING

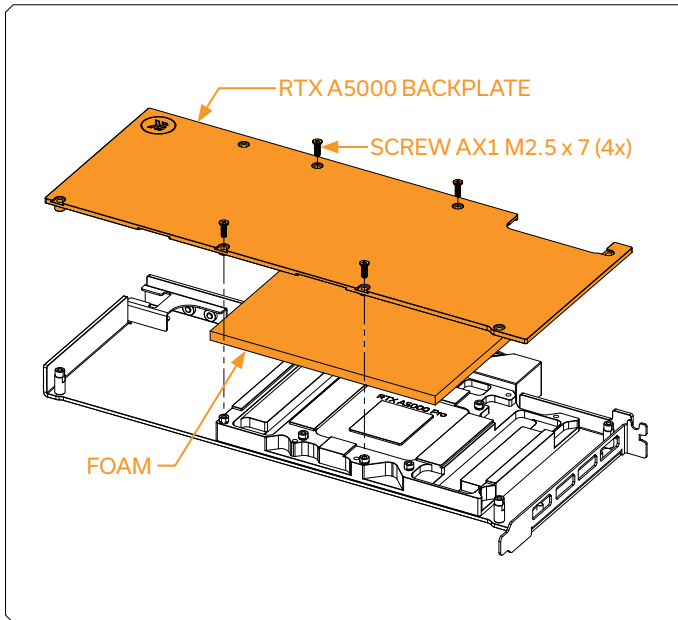


After unboxing the preinstalled water block, carefully put it on soft surface. Untighten four (4) screws AX1 M2.5 x 7 and remove foam and RTX A5000 Backplate. Four (4) screws AX1 M2.5 x 7 and foam you will not need anymore.

For this Step, you will need:

Phillips Head
Screwdriver

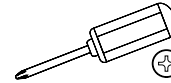

INSTALLING THE WATER BLOCK

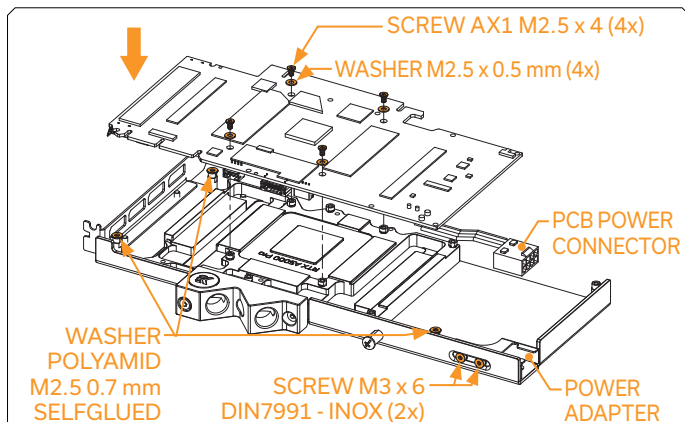


For this step you will need

M2.5 x 4 AX1 Screw
(13x)



Phillips Head
Screwdriver (1x)

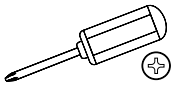

Allen Key 2 mm
(1x)



Polyamid Washer M2.5 x 0.7 mm
selfglued (6x)



Polyamid Washer M2.5 x 0.5 mm
(13x)



STEP 1

This procedure is the same for all full-cover water blocks.

STEP 1 MOUNTING PCB ON THE WATER BLOCK

Firstly, stick three (3) Washer POLYAMID M2.5 0.7 mm selfglued, on the top of 3 the biggest standoffs.


Carefully position the graphic card on water block with preinstalled standoffs. During this process, make sure you have aligned mounting holes of the PCB with holes of the water block.

Unscrew two (2) preinstalled M3 x 6 DIN7991 screws to properly place the PCB power connector in power adapter. After placement is done, tighten them on place again.



Pay attention not to use too much force when pressing the PCB down to the block since chip dies are prone to cracking.


Tighten four (4) screws AX1 M2.5 x 4 with belonging four (4) Washers M2.5 x 0.5 as shown in the picture. Tighten the screws evenly using the Phillips head screwdriver.

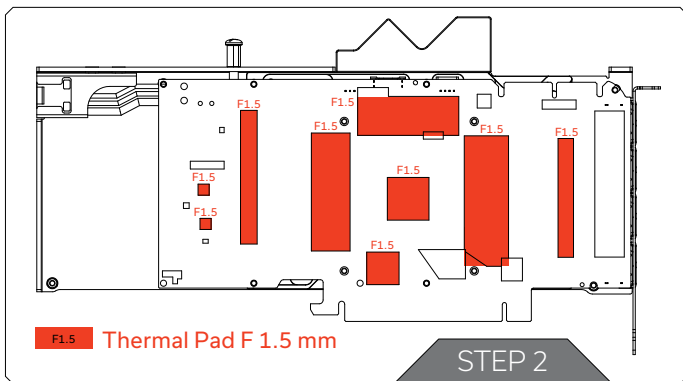


STEP 2 MOUNTING BACKPLATE ON PCB

Again, cut thermal pads to needed size. Thermal pads should be placed on the back of PCB, as illustrated below. EK made sure to provide you with more than an adequate quantity of thermal pads to complete this Step.

For this Step, you will need:



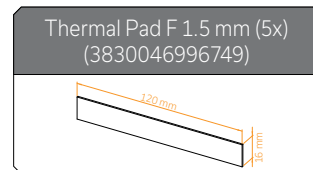


ATTACHING THE BACKPLATE TO THE GRAPHICS CARD

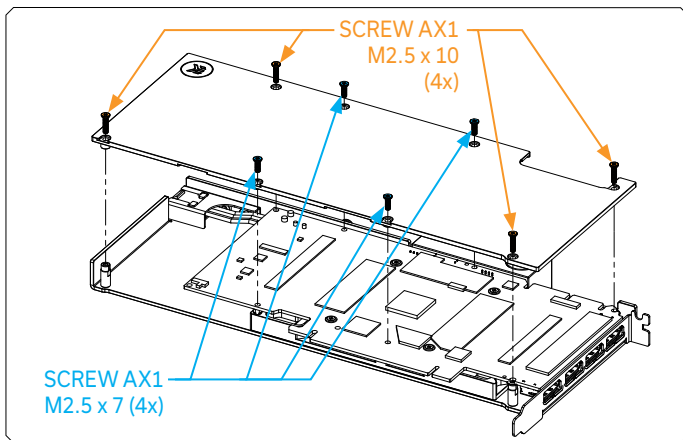

Use four (4) M2.5 x 10 AX1 Screws and four (4) M2.5 x 7 AX1 Screws. Tighten the screws evenly using the Phillips head screwdriver.

For this Step, you will need:

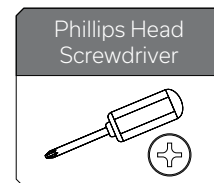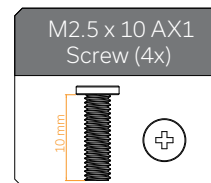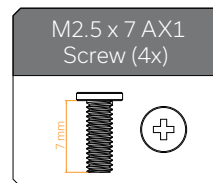

CHECKING FOR CONTACT

If necessary, temporarily remove the water block to check for uniform surface contact between the block and components. Pay special attention to the VRM section of the graphics card. Check whether the water block makes contact with the intended integrated circuit. Then repeat Steps from the previous section to re-attach the block.



In case you fail to obtain good contact, please check again or contact our support service at <https://www.ekwb.com/customer-support/>.

INSERTING THE GRAPHICS CARD INTO THE CHASSIS

Carefully lift your graphics card with the installed water block and insert it into your PC's motherboard PCIe express expansion slot. Please keep in mind that your graphics card is heavier than before it was equipped with the water block.



You need to be very careful when handling the graphics card. Avoid all unnecessary manipulation of the water block assembly that might damage your card or water block.

TESTING THE LOOP

To ensure the installation of EK components was successful, we recommend you perform a 24-hour leak test.

When your loop is complete and filled with coolant, connect the pump to a PSU outside your system. Do not connect power to any of the other components. Turn on the PSU and let the pump run continuously.

Inspect all parts of the loop, and in case the coolant leaks, fix the issue and repeat the testing process. To prevent possible damage, please ensure that all hardware is dry before the system is powered on.

SUPPORT AND SERVICE

In case you need assistance or wish to order spare parts or a new mounting mechanism, please contact:

<https://www.ekwb.com/customer-support/>

For spare parts orders, refer to the page with "WATER BLOCK SPECIFICATIONS AND MAIN PARTS" where you can find the EAN number of each part you might need.


Include the EAN number with quantity in your request. Mounting Mechanism EAN can be found under "BOX CONTENTS"

Thermal pads are readily available in the EK shop


SOCIAL MEDIA

 EKWaterBlocks

 @EKWaterBlocks

 ekwaterblocks

 EKWBofficial

 ekwaterblocks

